

Idol 1.0 Instruction

Idol 1.0 is a remote duplicator which can copy most of rolling code and fixed code remote from 300mhz-868mhz. Can store 4 different frequency fixed or rolling code in 4 different buttons. It can even re-generate a new remote. (Table 2.0 for detailed reference)

Technical data:

Frequency: 300mhz-868mhz

Voltage: 2.4V-3.3V or 7-12V optional

Static current:0.4uA±2uA or 1.4uA±2uA optional

Working voltage: 3V or 12V optional

Working current:24mA±2mA

Working range: 90m in the open air

Copy fixed and rolling code remote:

Please kindly noted that all the brands in the table 3.0 can be copied by IDOL

Step1: Press together 2nd button and 3rd button for 3 seconds, the LED will be on then go off (about 1 second) till LED will light on again, release both buttons. Which means it's entering into learning mode. Please see fig 1.

Step2: Press 1st button once, Idol LED flashes slowly. Please see fig 2. (The code will be stored in the 1st button)

Step3: Place the original remote in front of Idol, about 2-3cm distance. Please see fig 3.

Step4: Keep pressing any button of original remote till the Idol LED blink. It means the code has been successfully stored. Please see fig 4
Please repeat the above steps for the 2nd,3rd ,4th buttons of Idol.

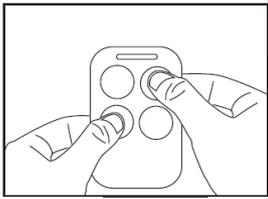


fig1

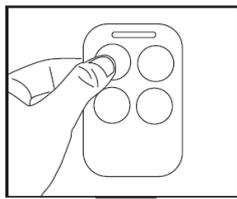


fig2

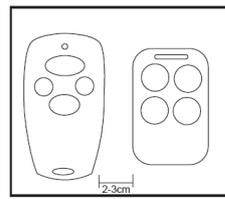


fig3

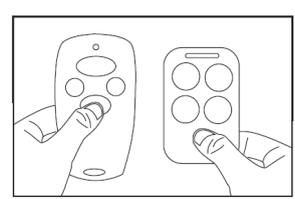


fig4

Attention:BFT,FAAC 433-868 SLH has different operation as bellowing:

BFT

Step1: Press 2nd button and 3rd button at the same time(about 3 seconds), the LED light on then go off (about 1 second) till LED light on again, release both buttons. Which means it's entering into learning mode. Please see fig1.

Step2: Press 1st button once, Idol LED flashes slowly. Please see fig2. (the code will be stored in 1st button)

Step3: Place BFT remote in front of Idol, about 2-3cm distance. Press any BFT button you want to copy (1-3cm distance from Idol) till Idol LED light on, release the buttons. Please see fig3

Step4: Keep pressing the 1st and 2nd button of BFT at the same time (or the rear button), till Idol LED blinks, release both buttons. Now the button has successfully copied the original remote.

Please repeat the above steps for the 2nd,3rd ,4th buttons of Idol.

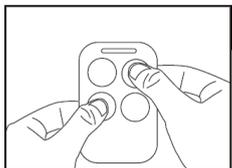


fig1

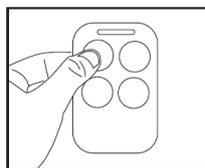


fig2

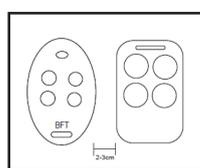


fig3

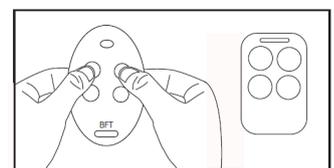
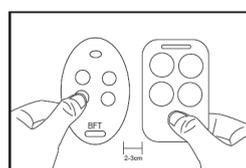


fig4

FAAC 433-868 SLH (The original FAAC remote must be MASTER remote)

Step1: Press together Idol's 2nd and 3rd button for 3 seconds, the LED will light on then go off (about 1 second) till LED will light on again, release the buttons. Which means it's entering into learning mode. Please see fig1.

Step2: Press 1st button once, Idol LED flashes slowly. Please see fig2

Step3: Place FAAC remote in front of Idol, about 2-3cm distance. Press any FAAC button you want to copy till Idol LED light. Please fig 3.

Step4: Press 1st and 2nd button at FAAC for 2 seconds, till FAAC remote flashes, release the buttons. Then press any button at FAAC till Idol's LED blink. It means you copy successfully.

Please repeat the above steps for the 2nd, 3rd ,4th buttons of Idol.

Notification: For **GENIUS** remote, the best distance for copying is 4-7cm.

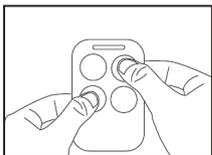


fig1

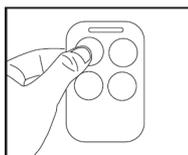


fig2

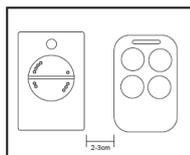


fig3

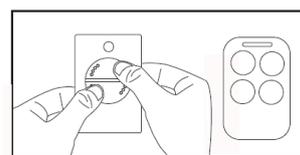
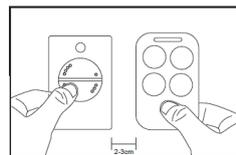


fig4

Remotely program function:

Please kindly note that all the brands in the table 1.0 can be program into original receiver

Get close to the receiver and press together Idol 1st and 3rd buttons for 3 seconds, the LED will light on then go off (about 1 second) till LED will light on again, release both buttons. Which means it's entering into remotely program mode. Then press any Idol's button that you already copied once, to indicate that remotely program procedure has started. After 8 seconds, wait the activation of the receiver (gate opening, lights starting, etc..) The remote control has been memorized.

Attention: If the receiver doesn't work, the "remote program function" maybe disarmed, if so please operate it manually.

Please kindly note that fixed code remote after copying, Idol can act as the original remote and do not need to program with receiver.

Table 1.0

List 1	List 2
Italy ALLMATIC B.RO OVER, B.RO 2WN, TECH3, MINIPASS, BRO.STAR APRIMATIC TR2/4, TM4 BENINCA TO.GO2 /4 VW, TO.GO2/4 QV, IO, T2/4 VW BFT MITTO 2/4M, MITTO 2/ 4A, MITTO RCB02/04, GHIBLI, KLEIO, TRC2/ 4, RB4 MURALE CARDIN S449 TRQ449100/TRQ449200/ TRQ449300/TRQ449400, TXQ449200/TXQ449300/ TXQ449400, S486:TRQ486200/ TRQ486400, TXQ486200/ TXQ486400 DITEC GOL4, BIXLP2/2 RED, BIXLG4 FAAC XT4 433 RC, TE4433H FADINI JUBI SMALL, JUBI-2, JUBI-4 GENIUS BRAVO TE4433H, ECHO GIBIDI AU1680 WOOD, GIBIDI AU1610/1680, AU1810/1600, AU01590 AUO3000 DOMINO, DTC 4334	KING GATES STYLO 4 MHOUSE TX4, TX3, GTX4 NICE SMILO2/4, FLO1/2/4R-S,VERY VR, FLO1/2/4 VDS TRQ, ECO-R V2 PHOENIX 433-868, TXC, TSC, TRC, HANDY PUJOL VARIO, MARTE Australia BOSS BHT4 France ADYX BRAVO, TE4433H, TE4433H BLUE PRASTEL MPSTF2/F4RE, MPSTL-1E/2E/4E, MPSTP2E/2E BLUE, MT4E/2E, BFOR, TRQ4P, TC2E, TRQ2P SOMFY TELIS 1/ 4 RTS

Re-generate function:

If customers buy an Idol remote, but they lost their original remote, they can re-generate an original remote.

Step1: Pressing 1st button and 4th button for 3 seconds, the LED will light on then go off (about 1 second) till LED light on again, release both buttons.

Which means it's entering into Re-generate mode. Please see the fig1

Step2: Press buttons to choose the brands as table 2.0. For example, if you choose BFT MITTO brand, press 1st button once, then LED flashes once.

Step3: Confirm the brand. Press 3rd and 4th button at the same time. Till LED blink, release the buttons. Now the Idol remote is functioning as a new BFT MITTO remote. Please see fig2.

Note1. If you are using Idol to regenerate a FAAC 4 buttons remote, then re-generate a BFT 2 buttons remote, the in the Idol remote, 1st and 2nd button is BFT code, 3rd and 4th button is FAAC code.

Note2. If you press button once, the Idol's LED flashes once; If you press button twice , the Idol's LED flashes twice, etc.

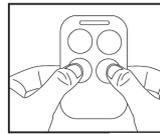
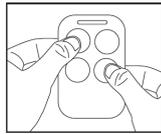


Table 2.0

Remote	Press once	Press twice	Press 3 times	Press 4 times
1st button	BFT MITTO	BENINCA cupido	NICE SMILO	NICEFLOR-S
2nd button	FAAC XT4 433 SLH	CAME TOP-432NA	DITEC DOL4C	LIFTMASTER/MERLIN
3rd button	SUPERLIFT	NOVA	V2 PHOENIX2	DOORHAN TRANSMITTER 4
4th button	BOSS BHT4	ATA PTX4		

Table 3.0

Copying list	
Table 1.0+Table 2.0+Follows brands Italy CAME TAM 432 SA, TOP 432 / NA, TOP 432 SD, TOP 432/434 EV DEA TR2 /4 MIO,GENIE R, TS2/4 MIO 868/ 868 FAAC XT2/XT4 433 SLH, XT2/XT4 868 SLH, XT2/XT4 433 SLH LR, XT2/XT4 868 SLH LR, T2/T4 433 SLH, T2/ T4 868 SLH, TML2/TML4 433 SLH, TML2/TML4 868 SLH, DL2/DL4 868 SLH. KEY 900TXB - 42R, SUB44, TXB-44R, TXG-44R NICE ONE:ON1/2/4/9, ONE ERA:ON1/2/4/9E, INT11/2 SEAV BE-HAPPY-RS1/2/3, BE-SMART RSX, BE-HAPPY RH1/2/3 TELCOMA FM 402/402 E Australia ATA PTX4 MERLIN + 2.0 E945M, E943M, E940M, E940M MERLIN M842, M832, M844, C945, C940, C943 SUPERLIFT Russia DOORHAN TRANSMITTER 4	France SOMFY KEYTIS 2/ 4 NS,KEYGO 4 RTS,SOMFY 433-NLT4 BEIGE, SOMFY 433-NLT2 RTR, SOMFY TX2 433MHZ United states CHAMBERLAIN LIFTMASTER MOTORLIFT 94335E, 4333E, 4335E, 94334E, 4333EML, 4335EML, 84334EML, 4335EML Germany SOMMER 4014 TX03-434-2, 4013 TX02-434-4, 4022 TX03-434-2, 4026 TX03-868-2, 4020 TX03-868-4, 4025-TX02868.4011, 4010 APERTO TX02-434/868-2, 4025 TX02-868-2, 4022 TX02-434-2, 4020 TX-03-868-4, 4013 TX03-434-4 South Africa Centurion NOVA Brazil Peccinin Rossi