

Setting up and add emitter

Additional During the settings, the time between two operation must function be shorter than 6s, otherwise it will quit the setting



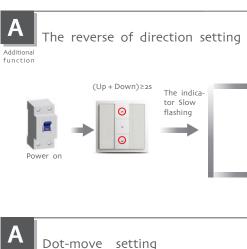

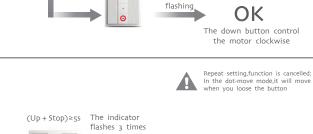

Up button×1

Down button×1

The indica-

OK

OK

Cancel emitter means deleting all the

้ด+ด

memory of emitter and limit switch

in the DC1686A receiver

The up button control the motor clockwise

tor Fast

flashing

The indica-

tor Fast

A



Additional

function

Cancel emitter

Additional During the settings, the time between two operation must function be shorter than 6s, otherwise it will quit the setting


Power on



0

0

Power on

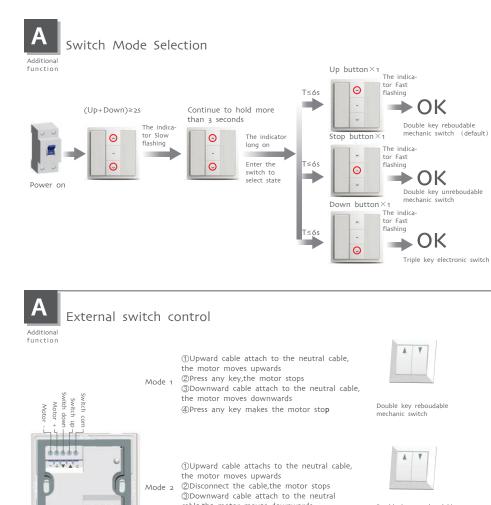

cable, the motor moves downwards Double key unreboudable ④ Disconnect the cables to make the motor stop mechanic switch

①Upward cable attachs to the neutral cable, the motor moves upwards. Mode 3 ②Downward cable attach to the neutral cable,the

motor moves downwards. ③Attach the upward/downward/neutral cable together to make the motor stop.

.....



Triple key electronic switch